PANORAMA Touch Screen
QSG-Quick Setup Guide

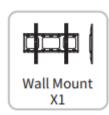| English	Deutsch	Nederlands	Français	Español

Product Content & Operation - Version 1.0

QUICK SETUP GUIDE PAN-10500

1. INCLUDED WITH THE SCREEN

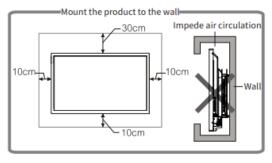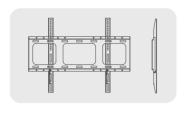Power Cord   Stylus X2   Wall Mount X1   Remote Control X1
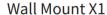
2. INSTALLATION

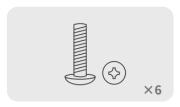### 2.1 PRECAUTIONS ON INSTALLATION

- For the wall mount installation please make sure that two professional installers are available. Neto weight 100kg.
- During installation make sure the wall mount is installed on to a firm wall and not on plaster or any other material that is not properly reinforced. The included mounting materials are thought only for brick/concrete walls.
- This product should not be installed on an oblique plane.
- This product should not be installed horizontally, with is front looking upwards.
- To avoid damage of the product or injury, keep the mounting bracket out of children's reach.
- Remember to tighten the screws during installation to avoid product damage or injury.
- As it is shown in the following diagram, ventilation space should be kept around the product for proper operation.
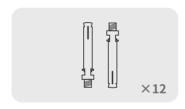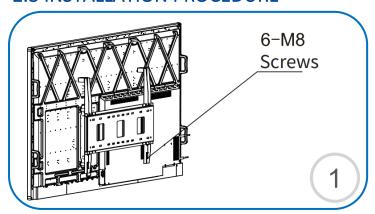

2.2 INCLUDED WITH THE WALL MOUNT

Wall Mount X1   M8 Machine Screw ×6   M8 Expansion Bolt ×12

QUICK SETUP GUIDE PAN-10500
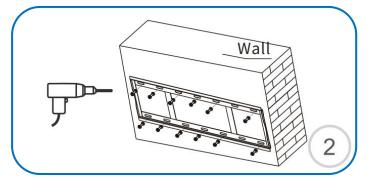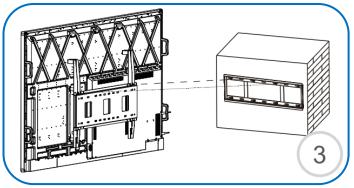
MOUNTING

2.3 INSTALLATION PROCEDURE

Six M8 screws corresponding to the size of the VESA holes are used to lock the two vertical bar hangers on the VESA mounting holes on the touch screen's back plate.

Place and level out the wall bracket, mark and drill the necessary holes. It is recommended to use 6 bolts on both sides of the mounting bracket.

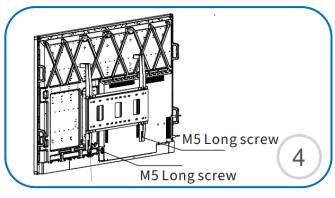Install the wall bracket using the included expansion bolts.
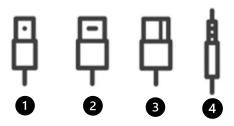
A 10mm bit might be required.

Once the wall bracket is installed and properly secured you may hang the touch screen. You may adjust the left and right position once the screen is in place.

With the screen in place always remember to tighten the M5 security screws on the bottom of the wall mount to prevent any security risks.

QUICK SETUP GUIDE PAN-10500

3. INPUT / OUTPUT CONNECTOR INFORMATION

❶ USB-B 2.0 (x1) Touch USB

❷ HDMI 2.0 (x1)

❸ DP 1.2 (x2)

❹ Audio Out 3.5 Jack

4. REMOTE CONTROL

❶ **Standby Switch:** Turn the display ON & OFF.

❷ **Mute:** Turn audio ON & OFF

❸ **Menu:** Direct access to the main settings Menu

❹ **Source Selection** Displays the input selection screen to select from

❺ **Select / Confirm:** Confirm your on-screen selection.

❻ **Directional Selection:** Option selection movement

❼ **Volume Down:** Lowers the audio volume.

❽ **Volume Up:** Raises the audio volume.

❾ **Return:** Return to the previous Menu/Option.

❿ **Back to OPS:** Direct access to OPS PC input